


Wooden frame installation dimensions							
Code	A	B	C	D	E	F	G
Name	bottom connecting rod	safety stands 1	safety stands 2	footrest	inside of seat box	the location hole of seat frame	outside of back
-0	387.4	312.1	354.1	400.9	447.7	473	416.4
-1	412.8	337.5	379.5	426.3	473.1	498.4	441.8
-2	438.2	362.9	404.9	451.7	498.5	523.8	467.2
-3	463.6	388.3	430.3	477.1	523.9	549.2	492.6
-4	489	413.7	455.7	502.5	549.3	574.6	518
-5	514.4	439.1	481.1	527.9	574.7	600	543.4
-6	539.8	464.5	506.5	553.3	600.1	625.4	568.8
-7	565.2	489.9	531.9	578.7	625.5	650.8	594.2
-8	590.6	515.3	557.3	604.1	650.9	676.2	619.6
-9	616	540.7	582.7	629.5	676.3	701.6	645
-10	641.4	566.1	608.1	654.9	701.7	727	670.4

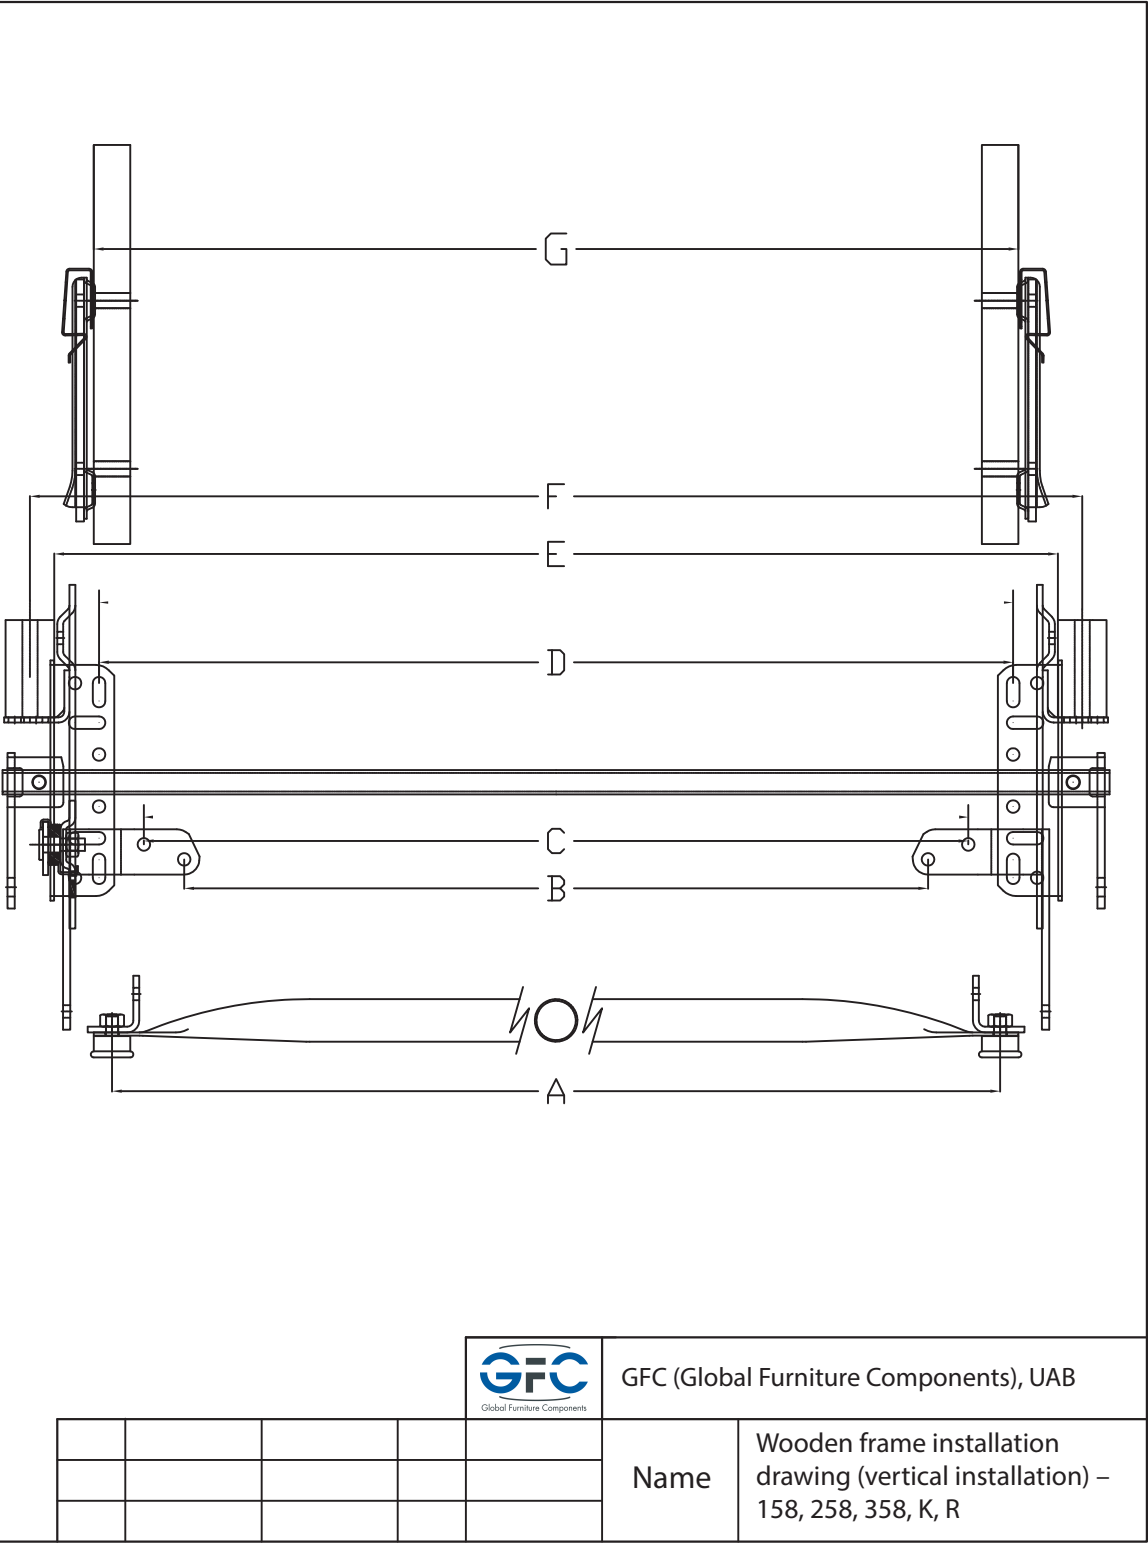

GFC (Global Furniture Components), UAB

Name

Wooden frame installation drawing (vertical installation) – 158, 258, 358, K, R